


ROOF CURB FIELD ASSEMBLY INSTRUCTIONS

- STEP 1:** THE (-1) END/MIDDLE PIECES HAVE (2) ALIGNMENT HOLES PER SIDE THAT ARE TO BE USED AS GUIDES WHEN ZIP-SCREWING THE (-2) SIDE PIECES TO THEM.
- STEP 2:** ONCE THE PILOT SCREWS ARE IN PLACE, ADD (3) MORE ZIP-SCREWS FOR A TOTAL OF (5) SCREWS FOR EACH JOINT.
- STEP 3:** AFTER ALL ZIP-SCREWS HAVE BEEN PLACED, USE DIMENSION "C" TO SQUARE THE CURB.

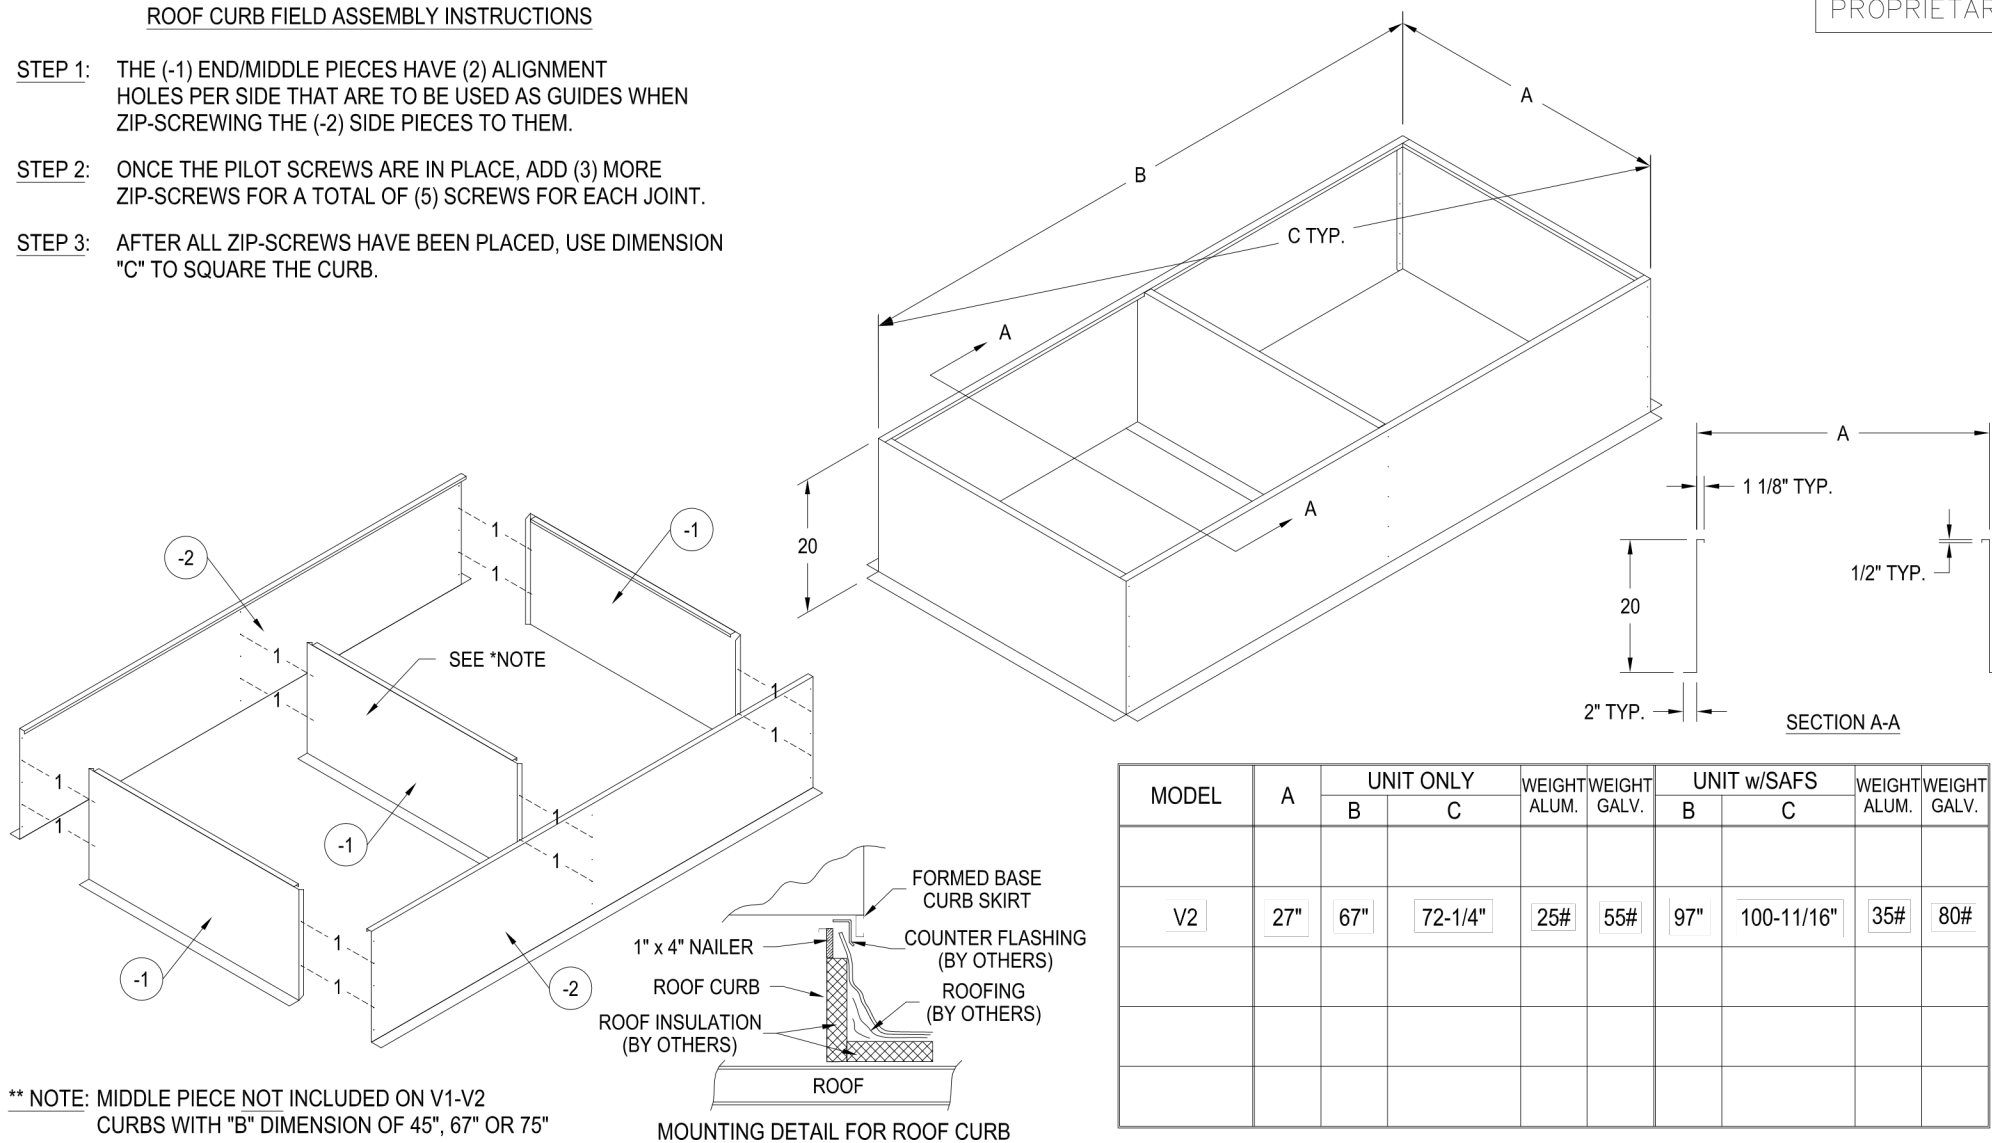

LAST REVISION:	UPDATE NOTE FOR MIDDLE PIECE	REV.	ECO#	DATE	CK BY	-	-	-
NOTES:		B	-	09-21-10	AMB	NET QTY	MATERIAL	MATERIAL SIZE
		C	-	07-02-15	AMB	Absolut Aire, Inc. 5496 North Riverview Dr., Kalamazoo MI 49004 DESC. V1-V5 - FLAT FULL CURB ASSEMBLY (SHIPPED K.D.)		
		D	-	11-19-15	AMB			
		E	-	05-07-18	AMB			
		F	-	05-28-19	CAP			
ALL O-LINES (OR 0,0) WILL ALWAYS BE IN THE LOWER LEFT-HAND CORNER OF THE PART						SCALE	NONE	DRAWN BY: ADR
DRAWING FILE LOCATION:	T:\SVSVCURB	PART #:	-			PLOT RATIO:	1=28	CK BY: -
						DATE:	08-16-05	REV. F
						WO#	-	FILE NO.: V-FC